



www.cougargaming.com

PURI

THE GAMER'S ULTIMATE WEAPON

REAL GEAR FOR REAL GAMERS

REAL GEAR FOR REAL GAMERS

FEATURES

ENGLISH

• COMPACT AND STURDY DESIGN

Solid and stable, Puri's minimalist design brings you all the key features of a pro gaming keyboard without burdening you with extras you don't need. Quality and strength meet in this superb gaming tool.

• CHERRY MX MECHANICAL SWITCHES

The original mechanical switches from Germany are also the best on the market. With 50 million clicks per switch of guaranteed flawless performance, Cherry switches bring you the response and reliability you want.

• BACKLIGHT EFFECTS (20 PRESET + 10 CUSTOMIZABLE)

Simple and elegant, Puri's backlight functionality gives you all you need. Start enjoying 20 preset modes that cover the most commonly needed patterns (uniform, wave, breathing, etc.) and 10 modes for you to customize!

• MAGNETIC PROTECTIVE COVER

No cloth or mesh pouches here: to truly protect your keyboard both at home and on the go, you need (and we are happy to give you!) a solid cover. Puri's magnetically attached cover will protect it from water spills, bread crumbs or pressure when traveling.

DEUTSCH

- SCHÜTZENDE ABDECKUNG MIT MAGNETHALTER
- ABNEHMBARES KABEL
- 20 BELEUCHTUNGS-EFFEKTE
- CHERRY MECHANISCHE SWITCHES
- N-KEY ROLLOVER IM USB-BETRIEB
- RUTSCHFESTE GUMMI-FÜSSE

ESPAÑOL

- MAGNÉTICO TAPA PROTECTORA
- CABLE DETACHABLE
- 20 EFECTOS DE RETROILUMINACIÓN
- TECLADOS MECÁNICOS CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

PORTUGUÊS

- MAGNÉTICO CAPA PROTETORA
- CABO DESTACÁVEL
- 20 EFEITOS DE LUZ DE FUNDO
- TECLADOS MECÁNICOS CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

РУССКИЙ

- МАГНИТНОБЕЗАЩИТНАЯ КРЫШКА
- СЪЕМНЫЙ КАБЕЛЬ
- 20 ЭФФЕКТ ПОДСВЕТКИ
- МЕХАНИЧЕСКИЕ КЛАВИШИ CHERRY MX
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS RESPONSE TIME

POLISH

- OSŁONA OCHRONNA
- ODŁĄCZANY KABEL
- 20 EFEKTÓW PODŚWIETLENIA
- MECHANICZNE PRZEŁĄCZNIKI CHERRY MX
- N-KEY ROLLOVER W TRYBIE USB
- RAPORTOWANIE 1000Hz / CZAS REAKCJI 1MS

FRANÇAIS

- HOUSSE DE PROTECTION MAGNÉTIQUE
- CÂBLE DÉTACHABLE
- 20 EFFETS DE RÉTROÉCLAIRAGE
- SWITCHS MÉCANIQUES CHERRY MX
- N-KEY ROLLOVER
- TEMPS DE RÉPONSE 1MS/ FRÉQUENCE 1000Hz

• N-KEY ROLLOVER IN USB MODE

N-KEY directly in USB mode, without need for a USB to PS/2 adapter. Unlimited simultaneous key presses.

• FUNCTION KEY SHORTCUTS

FN key combos allow you to quickly access multimedia functions and lock the WIN & application key.

• 1000 Hz POLLING RATE / 1 ms RESPONSE TIME

• DEDICATED MULTIMEDIA FUNCTION KEYS

• 3-STEP HEIGHT AND ANGLE ADJUSTMENT

• CABLE MANAGEMENT SYSTEM

• BRAIDED CABLE & GOLDEN-PLATED CONNECTOR

• WINDOWS & APPLICATION KEY LOCK

Avoid kicking yourself out of games by locking the Windows key in-game with an easy shortcut.

• DRIVER-FREE

Plug and Play. No need to bother installing or configuring anything, no driver conflicts, no updates. Just you and the game.

HUNGARIAN

- MÁGNESES PROTEKTOR FEDÉL
- LEVEHETŐ KÁBEL
- 20 PROGRAMOZOTT FÉNYHATÁS
- CHERRY MX MECHANIKUS KAPCSOLÓK
- N-KARAKTERES PUFFER USB ÜZEMMÓDBAN (N-KEY ROLLOVER)
- 1000Hz-ES MINTAVÉTELEZÉS / 1MS-OS VÁLASZIDŐ

ITALIANO

- COPERTURA PROTETTIVA MAGNETICA
- CAVO STACCABILE
- 20 EFFETTI DI RETROILLUMINAZIONE
- CHERRY MX SWITCH MECCANICI
- N-KEY ROLLOVER IN MODALITA' USB
- 1000Hz POLLING RATE / 1MS RESPONSE TIME

日本語

- 磁気保護カバー
- 取り外し可能なケーブル
- 20パターンLEDバックライトモード
- CHERRY MXメカニカル・スイッチ使用
- Nキーロールオーバー対応
- 1000Hzレポートレート/1MS応答速度


한국어

- 자기보호 커버
- 탈착식 케이블
- 20 가지 백라이트 효과
- CHERRY MX 기계식 키
- N-KEY ROLLOVER
- 1000 Hz POLLING RATE / 1MS 응답속도

中文

- 磁铁保护防尘盖
- 分离式线材
- 20种背光效果
- CHERRY MX 机械式开关
- N-KEY ROLLOVER / 100%无冲突按键
- 1000 Hz 轮询速率 / 1MS响应时间

DEFAULT GAMING BACKLIGHT SETTINGS

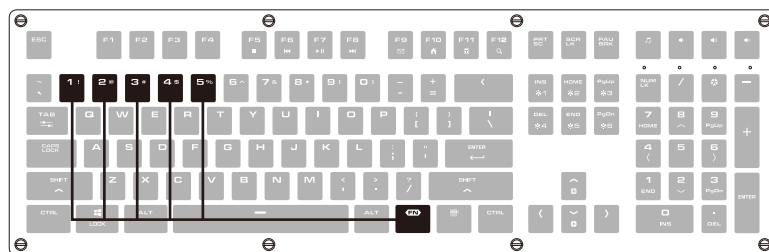


- Backlight 1 : Press the Fn key + 1
- Backlight 2 : Press the Fn key + 2
- Backlight 3 : Press the Fn key + 3
- Backlight 4 : Press the Fn key + 4
- Backlight 5 : Press the Fn key + 5



BACKLIGHT EFFECTS SPEED
Fn + - / +

☀️ 1 ☀️ A ☀️ ↓ ☀️ L

• When the speed reaches its maximum or minimum, the NUM Lock, CAPS Lock, Scroll Lock and Windows Key lock will start blinking.

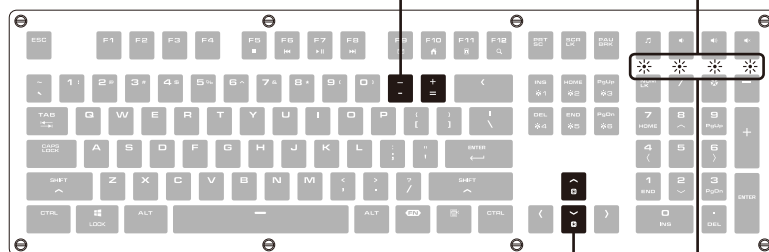

BRIGHTNESS ADJUSTMENT
Fn + < / >


☀️ 1 ☀️ A ☀️ ↓ ☀️ L

• When the brightness reaches its maximum or minimum, the NUM Lock, CAPS Lock, Scroll Lock and Windows Key lock will start blinking.

RESTORE THE DEFAULT SETTING
Fn + ESC

KEY SHORTCUTS
Fn + [Function Key]

BACKLIGHT EFFECTS (20 PRESET + 10 CUSTOMIZABLE)
Fn + * 1~6

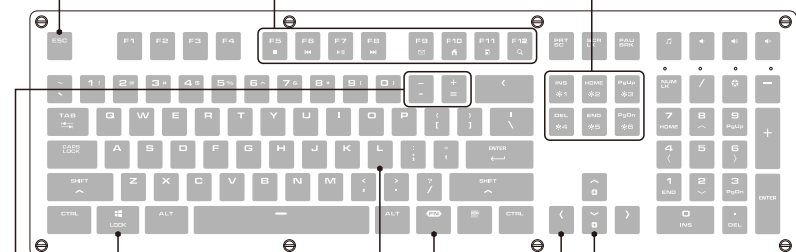

- LOCK WIN KEY & APPLICATION KEY
Fn + LOCK
- FN KEY
Fn
- FULL KEY BACKLIGHT BRIGHTNESS ADJUSTMENT
Fn + * / *
- BACKLIGHT EFFECTS SPEED
Fn + - / +
- LOGO BACKLIGHT On/Breathing/Off
Fn + L
- BACKLIGHT EFFECTS DIRECTION
Fn + < / >

PACKAGE CONTAINS

COUGAR PURI Gaming Keyboard
User Manual

SYSTEM REQUIREMENTS

Windows 7, Windows 8, Windows 10

SPECIFICATIONS

Product name	PURI Gaming Keyboard	Interface	USB plug
Key switch	Cherry MX mechanical switch	Cable length	1.8m
N-key rollover	Yes (USB mode support)	Dimension	150(L) X 460(W) X 40(H) mm
Polling rate	1000Hz	Material	Steel / Plastic
Full key backlight	Yes	Weight	1.4kg

The above specifications may vary by country or region

* Depends on diverse languages and regions, the keyboard layout will be different.

20 BACKLIGHT EFFECTS

<p>Press the Fn key + INS key to change different backlight effects.</p>	<p>Press the Fn key + HOME key to change different backlight effects.</p>	<p>Press the Fn key + PgUp key to change different backlight effects.</p>	<p>Press the Fn key + DEL key to change different backlight effects.</p>	<p>Press the Fn key + PgDn key to change different backlight effects.</p>
<p>1 STEADY</p> <p>Brightness adjustment</p>	<p>1 RIPPLE</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>1 SNAKE</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>1 WAVE</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p> <p>Backlight effects direction</p>	<p>1 STAR</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>
<p>2 GRADIENT</p> <p>Brightness adjustment</p>	<p>2 REACTIVE</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>2 RHYTHM</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>2 CIRCLE</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p> <p>Backlight effects direction</p>	<p>2 STAR-2</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>
<p>3 BREATHING</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>3 ARROW</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>3 RAIN</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>3 WAVE-2</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p> <p>Backlight effects direction</p>	<p>3 WAVE-4</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p> <p>Backlight effects direction</p>
<p>4 VANISH</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>4 AREA</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>4 RIPPLE-2</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>	<p>4 WAVE-3</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p> <p>Backlight effects direction</p>	<p>4 FLOW</p> <p>Brightness adjustment</p> <p>Backlight effects speed</p>

CUSTOMIZE BACKLIGHT EFFECTS: KEY BY KEY

There are 10 custom lighting effects in total.

Step 1: Press the Fn key + 1~0

Step 2: Press the Fn key + END key

Step 3: Press the key you want to light up. Then, you can continue to set other keys. When you finish all settings, press the Fn key + END key again to store it.

RESTORE THE DEFAULT SETTING

GLOBAL WARRANTY POLICY

WARRANTY PERIODS OF COUGAR GAMING DEVICES

Product : COUGAR PURI gaming keyboard
 Warranty : 1 Year
 This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

WARRANTY AGREEMENT

- If the product has defects in material or manufacture, COUGAR will provide product repair and replacement service within the warranty period.
- Our warranty service is based on the date of the invoice or warranty card (must be affixed with the store stamp). If you lose the aforementioned evidence, we will apply the original shipping date of the product as the beginning date of warranty period. The shipping date will be identified by the product serial number(S/N).

CONDITIONS WHERE FREE MAINTENANCE IS NOT PROVIDED

- Any fault or damage caused by natural disasters (including storm, fire, flood, thunder, earthquake, etc).
- Any fault or damage caused by accidental factors and man-made reasons (including hit, scrape, crash, moving, compression, stain, corrosion, use of incurred on unsuitable voltage, computer virus, riot, misuse, malicious damage, etc).
- Use in an improper operating environment (including high temperature, high humidity, water inflow, etc).
- Inability to provide the product warranty card, purchase receipt or invoice to prove the product is still within the warranty period and the shipping date of the product is out of warranty.
- The warranty card or product serial number has been altered or its number is hard to identify.
- The warranty period has expired.
- Any fault or damage caused by non-compliance with regulations stated on the user manual or improper, rough and careless treatment.
- Any fault or damage caused by use of parts not certified by COUGAR original manufacturer.
- The problem is caused by improper repair or adjustment by the buyer or any manufacturer without authorization from COUGAR.
- The product is not acquired from an authorized distributor of the company or is acquired from illicit sources.
- Paper carton, instruction and other accessories are not warranted.

DISCLAIMERS

- COUGAR product is not authorized for use as critical components in life support device or for incorrect application software or malfunction of the product.
 - COUGAR is not liable for the death or damage of person or loss of property when product is using as, including but not limited to, medical equipment, military equipment, traffic equipment and disaster prevention system.
 - COUGAR's warranty liability is limited to repair, replacement.
 - COUGAR is not liable for any damages, expenses, lost data, lost revenues, lost savings, lost profits, or any incidental or consequential damages due to using defect product of COUGAR.
- If you have any question about the warranty, please feel free to contact us.
 Customer support: service@cougargaming.com

LEGAL NOTICES

This manual was created by CompuCase Enterprise and may not be completely or partially copied, passed on, distributed or stored without written consent by CompuCase Enterprise.
 COUGAR® is a registered brand of CompuCase Enterprise Other product and company names mentioned in this documentation may be brands or trademarks of their respective owners.
 CompuCase Enterprise reserves the right to make changes concerning the contents of the manual and the technical data of the product without previous announcement.



ДАТА ИЗГОТОВЛЕНИЯ ПРОДУКЦИИ

год и месяц изготовления продукции указаны в серийном номере продукта.
 (существует 2 способа определения даты изготовления, оба способа описаны ниже)

- A** После S/N: первые две цифры означают год, вторые две – месяц изготовления.
 Например, S/N: **H1702**000001 означает, что товар был произведен в феврале 2017 года.
- B** После S/N: если указаны буквы, то две буквы представляют цифры из таблицы ниже, и означают год, последующие две цифры – месяц изготовления.
 Например, S/N: **DAG02**REVI000001 означает, что товар был произведен в феврале 2017 года.

A	B	C	D	E	F	G	H	I	J
1	2	3	4	5	6	7	8	9	0

• Например, AG = 17 = 2017 год

MANUFACTURER CONTACT

COUGAR USA Technical Service
 Tel: (833) 256-3778
 Mail: rma@compuCaseusa.com
<https://cougargaming.com/support/contact/upload/>

CompuCase Enterprise Co.,Ltd.
 No. 225, Lane 54, An Ho Road Sec. 2 Tainan, Taiwan, R.O.C
 Tel:+886-6-356-0606
 Service E-Mail: service@cougargaming.com

تعليمات التركيب و الأمان:
 • يُنصح بعد البقاء دون تغيير وضعية اليبدين لساعات طويلة.
 • لا تستخدم لوحة المفاتيح على الأرض، ودر اعك اسندهما على المكتب.
 • التزم بالوضعية الصحيحة و المرحة عند استخدام لوحة المفاتيح.
 • يجب التأكد من توصيل كافة التوصيلات بالشكل الصحيح.
 • احفظ الجهاز بعيدا عن مصادر المياه و الرطوبة.
 • الفصل التيار الكهربائي فوراً في حالة الاشتباه بوجود التماس.
 • تأكد بأن مصدر الطاقة لديك مناسب لما يحتاجه هذا الجهاز.